Vacuum Cleaner
user manual

✻ Before operating this unit, please read the instructions carefully.
✻ For indoor use only.

English

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at

www.samsung.com/register

SAMSUNG

Code No. DJ68-00462B REV(0.0)

SAFETY INFORMATION

- Before operating the appliance, please read this manual thoroughly and retain it for your reference.
- Because these following operating instructions cover various models, the characteristics of your vacuum cleaner may differ slightly from those described in this manual.

CAUTION/WARNING SYMBOLS USED

⚠ WARNING	Indicates that a danger of death or serious injury exists.
⚠ CAUTION	Indicates that a risk of personal injury or material damage exists.

OTHER SYMBOLS USED

	Represents something you must NOT do.
	Represents something you must follow.
	Indicates that you must disconnect the power plug from the socket.
	It is recommended that this symbol be handled by service man.

safety information

IMPORTANT SAFEGUARDS

- Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
- WARNING: Do not use the vacuum cleaner when rug or floor is wet.
  Do not use to suck up water.
- Close supervision is necessary when any appliance is used by or near children. Do not allow the vacuum cleaner to be used as a toy. Do not allow the vacuum cleaner to run unattended at any time. Use the vacuum cleaner only for its intended use as described in these instructions.
- Do not use the vacuum cleaner without a dust bag. Change the dust bag before it is full in order to maintain the best efficiency.
- Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
- Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put weight on the hose. Do not block the suction or the exhaust port.
- Switch the vacuum cleaner off on the body of the machine before unplugging from the electrical outlet. Disconnect the plug from the electrical outlet before changing the dust bag or dust container. To avoid damage, please remove the plug by grasping the plug itself, not by pulling on the cord.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
- The use of an extension cord is not recommended.
- If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Don't carry the vacuum cleaner by holding the hose.
  Use the handle on the vacuum cleaner set.
- Unplug the cleaner when not in use. Turn off the power switch before unplugging.

contents

ASSEMBLING THE CLEANER 05 Assembling the Cleaner

05

OPERATING THE CLEANER 06 Power cord
06 On/Off Switch
06 Power control

06

MAINTAIN TOOLS AND FILTER 08 Using accessory
09 Maintain floor tools
10 Check filter indicator
10 Changing the dust bag
10 Cleaning inlet filter
11 Cleaning outlet filter

08

TROUBLESHOOTING 12 Troubleshooting

12

assembling the cleaner

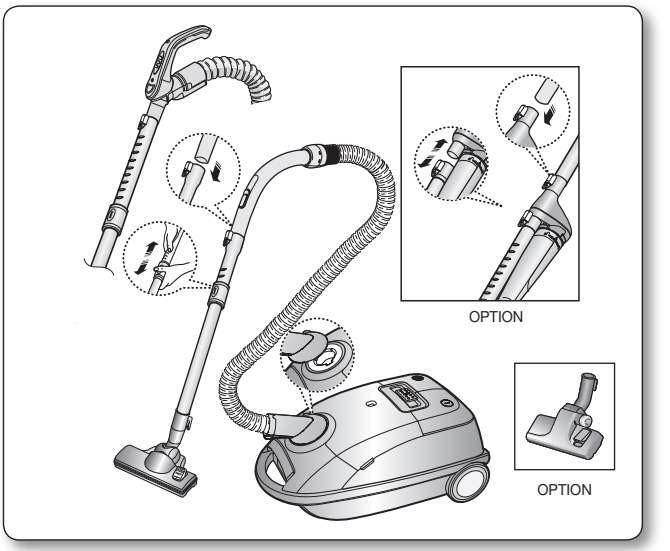

- Features may vary according to model. Refer to 5,6 page.

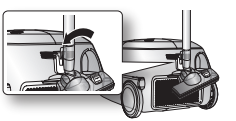

CAUTION
- For storage, park the floor nozzle.

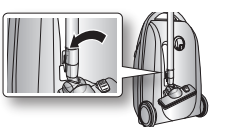

operating the cleaner

POWER CORD

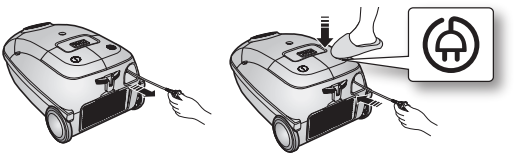

CAUTION • When removing the plug from the electrical outlet, grasp the plug, not the cord.

ON/OFF SWITCH

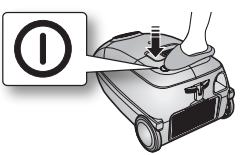

POWER CONTROL

Remote-control type (OPTION)

- HOSE

1. Vacuum cleaner ON/OFF
   Press the ON/OFF button to operate the vacuum cleaner.
   Press again to stop the vacuum cleaner.
2. Vacuum cleaner MIN/MID
   Press the MIN/MID button to operate the vacuum at a low level (for curtain cleaning, etc.).
   Press again to operate the vacuum in a MID mode.
3. Using at MAX
   Press the MAX button to operate the vacuum at maximum intake.

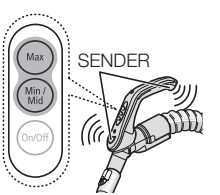

HANDLE CONTROL
[The cleaner is controlled by using infrared signals.]

- BODY

Press the power ON/OFF button repeatedly to start and to stop the vacuum cleaner.
(OFF → ON → OFF)

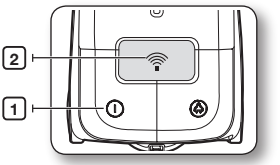

If the remote handle control is not working, the cleaner can be operated using the ON/OFF button on the body of the machine.

1	The ON/OFF button operates the vacuum cleanner or stops it.
2	The INFRARED light indicates the part that receives the infra-red signal from the handle control.

Body-control type (OPTION)

- HOSE

To reduce suction for leaning draperies, small rugs, and other light fabrics, pull the tap air until the hole is open

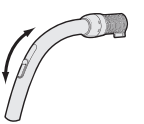

- BODY (VOLUME TYPE ONLY)

To control power level, just slide the power control bottom right and left.

MIN = For delicate fabrics, e.g.net curtains.

MAX = For hard floors and heavily soiled carpets.

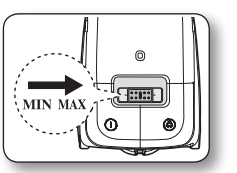

maintain tools and filter

USING ACCESSORY

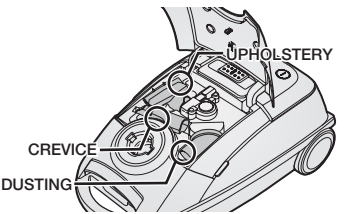

Accessory

- Dusting brush for furniture. shelves, books, etc.

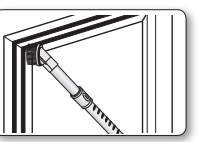

- Crevice tool for radiators, crevices, corners, between cushions.

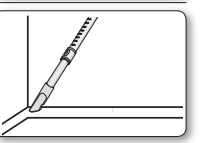

- Upholstery brush - for cushions and drapery.

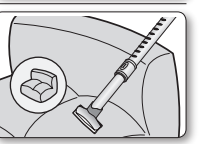

Pipe

- Adjust the length of the telescopic pipe by sliding the length control button located in the center of the telescopic pipe back and forth.

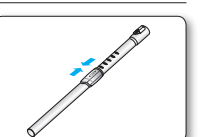

- To check for blockages, separate the telescopic pipe and adjust to shorten. This allows for easier removal of waste clogging the tube.

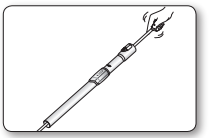

MAINTAIN FLOOR TOOLS

2-Step Brush (OPTION)

- Dusting brush for furniture. shelves, books, etc.

Carpet Cleaning



Floor Cleaning

- Remove waste matter completely if the inlet is blocked.

Cleaning the cyclone filter (OPTION)

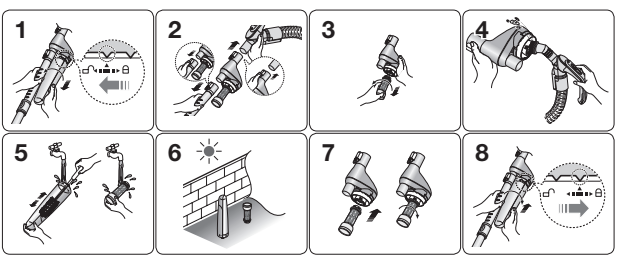

- Use Cyclone Filter for the best efficiency.

maintain tools and filter

CHECK FILTER INDICATOR

When the indicator color has changed Please replace the dust bag.

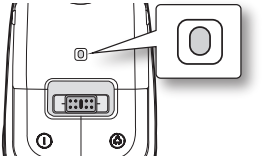

CHANGING THE DUST BAG



OPTIONAL

- For Cloth Bag
  After using, if the cloth bag is full of dust, clean the cloth bag and use it again.

You can purchase dust bags in the shops where you bought this vacuum cleaner.

Paper bag can be used as you prefer (paper-bag:VP-90)

CLEANING INLET FILTER

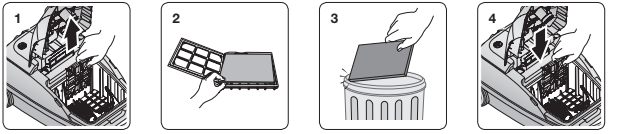

Don't throw away the filter.

CLEANING OUTLET FILTER

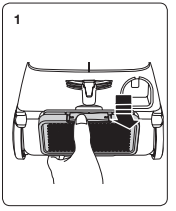

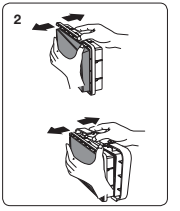

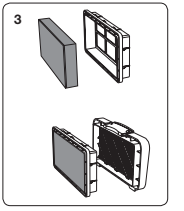

CHANGE THE BATTERY (OPTION)

1. When the vacuum cleaner dows not work, replace the batteries. If the problem persists, please contact our authorized dealer.
2. Use 2 batteries of size AA.

WARNING

1. Never disassemble or recharge the batteries.
2. Never heat up the batteries or throw them into fire.
3. Do not reverse (+), (-) poles
4. Dispose of the batteries property.

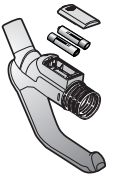

BATTERY TYPE :
AA Size

troubleshooting

PROBLEM	SOLUTION
Motor dows not start.	• Check cable, pulg and socket. • Leave to cool.
Suction force is gradually decreasing.	• Check for blockage and remove.
Cord does not rewind fully.	• Pull the cord out 2-3m and push down the cord rewind button.
Vacuum cleaner dows not pick up dirt.	• Check hose and replace if required.
Low or decreasing suction	• Please check filter and, if required, clean as illustrated in the instructions. if filters are out of condition change them to new ones.

Memo

Memo

Memo

SAMSUNG

SAMSUNG

MEMO

MEMO

MEMO

اكتشاف الأخطاء وإصلاحها

المشكلة	الحل
المحرك لا يبدأ التشغيل	• افحص قابس لكابل والمأخذ. • اترك المحرك حتى يبرد .
قوة الامتصاص تتناقص تدريجيًا.	• افحص وجود انسداد ثم قم بإزالته.
لا تتم إعادة لف السلك بالكامل	• قم بسحب السلك للخارج مقدار ٢ -٣ متر ثم اضغط زر إعادة لف السلك.
المكنسة لا تقوم بالتقاط الأتربة	• افحص الخرطوم واستبدله إذا لزم الأمر.
انخفاض أو تناقص الامتصاص	• برجاء فحص الفلتر وتنظيفه إذا لزم الأمر كما هو موضح في التعليمات.

أسئلة أو استفسارات بخدمة العملاء شركة سامسونج في حالة الاتصال بمركز اتصالات سامسونج

Country	Customer Care Center ☎	Web Site
U.A.E	800SAMSUNG (7267864)	www.samsung.com/ae

تنظيف فلتر الإخراج

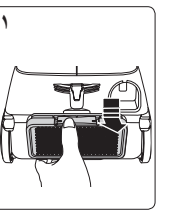

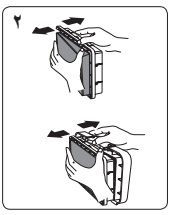

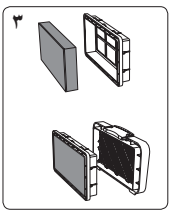

تغيير البطارية (اختياري)



١. استبدل البطاريات عند توقف المكنسة الكهربائية عن العمل. إذا اساستمرت المشكلة، يرجى الاتصال بوكيلنا المعتمد.

٢. استخدم بطاريتين من الحجم AA.

تحذير

١. لا تقم مطلقاً بفك البطاريات أو إعادة شحنها.

٢. لا تقم مطلقاً بتسخين البطاريات أو إلقاءها في النار.

٣. لا تعكس القطبين (+)،(-).

٤. تخلص من البطاريات بشكل ملائم.

نوع البطارية:
حجم AA

صيانة الأدوات والفلتر

فحص مؤشر الفلتر

عند تغير لون المؤشر، برجاء استبدال كيس الأتربة.

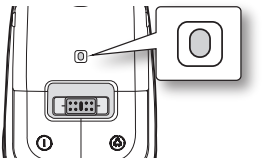

تغيير كيس الأتربة

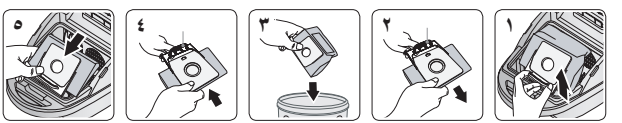

اختياري

• بالنسبة للكيس القماشي

بعد الاستخدام، إذا كان الكيس القماشي مليئًا بالأتربة قم بتنظيف الكيس القماشي ثم استخدمه مرة أخرى.

يمكنك شراء أكياس الأتربة من المحلات التي تم شراء هذه المكنسة منها.
يمكن استخدام الكيس الورقي حسب ما تفضل (الكيس الورقي: VP-90)

تنظيف فلتر الإدخال

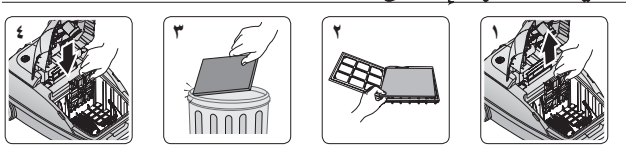

لا تتخلص من الفلتر.

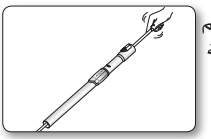

• لفحص وجود انسداد، قم بفصل الماسورة التليسكوبية وقم بضبطها على أقصر طول. سوف يسمح ذلك بسهولة إزالة النفايات التي تسد الأنبوبة.

صيانة أدوات الأرضية

٢- فرشاة الدواسة (اختياري)

• فرشاة تنظيف الغبار للأثاث والأرفف والكتب...إلخ.

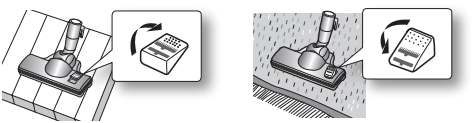

تنظيف الأرضية تنظيف السجاد

• قم بإزالة النفايات بالكامل في حالة انسداد المدخل.

تنظيف فلتر الطرد المركزي (اختياري)

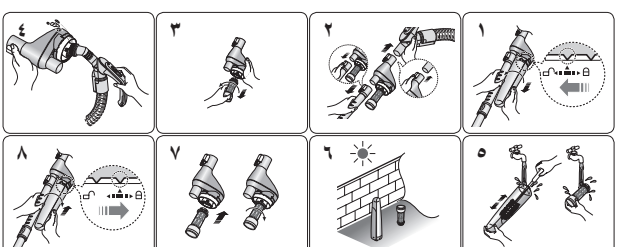

• استخدم فلتر الطرد المركزي لتحقيق أكبر مستوى من الفاعلية.

صيانة الأدوات والفلتر

استخدام الملحقات

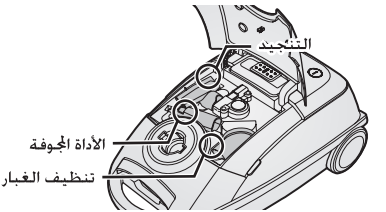

تنظيف الغبار

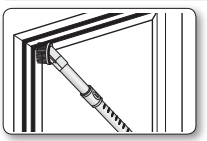

• .فرشاة الأتربة للأثاث والأرفف والكتب خلافه.

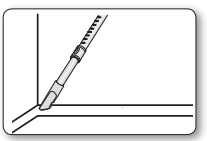

• أداة الشقوق لأجهزة الراديـاتير والشقوق والزوايا والمناطق بين الوسائد.

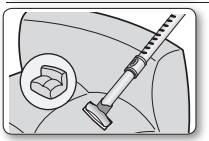

• فرشاة تنظيف التنجيد - للوسائد والمفروشات.

الماسورة

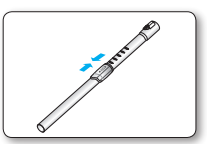

• قم بضبط طول الماسورة التليسكوبية من خلال تحريك زر التحكم في الطول الموجود في منتصف الماسورة التليسكوبية للخلف والأمام.

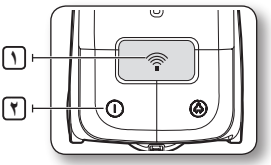

- الجسم

اضغط على الزر ON/OFF بشكل متكرر لتشغيل وإيقاف تشغيل المكنسة الكهربائية.
(OFF (إيقاف) ← ON (تشغيل) ← OFF (إيقاف))

إذا لم يكن جهاز التحكم عن بعد اليدوي يعمل، يمكنك تشغيل المكنسة باستخدام الزر ON/OFF في الجهاز.

١	يُستخدم الزر ON/OFF في تشغيل أو إيقاف تشغيل المكنسة الكهربائية.
٢	يُشير ضوء الأشعة تحت الحمراء إلى الجزء المستقبل لإشارة الأشعة تحت الحمراء من جهاز التحكم عن بعد اليدوي.

الجسم في الطاقة(اختياري)

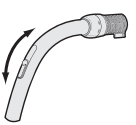

-الخرطوم

لتقليل الامتصاص للستائر المائلة والسجاد صغير الحجم والأقمشة الخفيفة الأخرى، اسحب جزء تهوية السدادة حتى يتم فتح الفتحة.

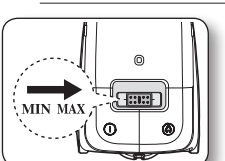

- الجسم

(النوع الذي يحتوي على زر لتغيير مستوى الطاقة فقط)

للتحكم في مستوى الطاقة، قم بتحريك زر التحكم في الطاقة جهة اليمين واليسار.

MIN = للأقمشة الخفيفة، على سبيل المثال الستائر الشبكية.

MAX = للأرضيات الصعبة والسجاد شديد الاتساخ.

تشغيل المكنسة

سلك الطاقة

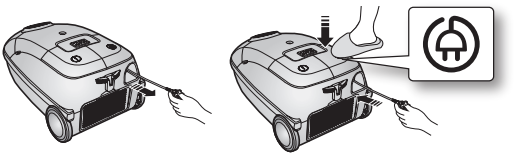

تنبيه ⚠ • عند نزع القابس من المأخذ الكهربائي. قم بالإمساك بالقابس وليس السلك.

مفتاح التشغيل/إيقاف التشغيل

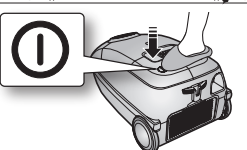

التحكم في الطاقة

نوع جهاز التحكم عن بعد (اختياري)

-الخرطوم

١. تشغيل/ إيقاف تشغيل المكنسة الكهربائية

اضغط على زر ON/OFF (تشغيل/ إيقاف تشغيل) لتشغيل المكنسة الكهربائية.

اضغط عليه مرة أخرى لإيقاف تشغيل المكنسة الكهربائية.

٢.المكنسة الكهربائية MIN/MID

اضغط على الزر MIN/MID لتشغيل المكنسة الكهربائية على مستوى منخفض (لتنظيف الستائر ...إلخ).

اضغط مرة أخرى لتشغيل المكنسة الكهربائية على الوضع MID (متوسط).

٣. الاستخدام على المستوى MAX (الحد الأقصى)

اضغط على الزر MAX لتشغيل المكنسة على مستوى الحد الأقصى للشفط.

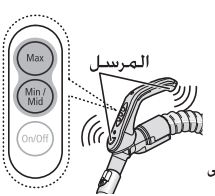

التحكم في المقبض

[يتم التحكم في المكنسة عن طريق استخدام إشارات الأشعة تحت الحمراء].

تجميع المكنسة



• قد تختلف الإجراءات تبعًا للطراز. راجع الصفحة ٥ و ٦ .

• للتخزين، قم بتجميع فوهة الأرضية.

تنبيه

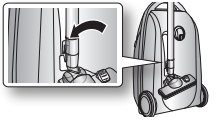

المحتويات

تجميع المكنسة ٥

٥

تشغيل المكنسة ٦

٦

صيانة الأدوات والفلتر ٨

٨

صيانة الأدوات والفلتر ١٢

١٢

تجميع المكنسة ٥

سلك الطاقة ٦
مفتاح التشغيل/إيقاف التشغيل ٦
التحكم في الطاقة ٦

استخدام الملحقات ٨
صيانة أدوات الأرضية ٩
فحص مؤشر الفلتر ١٠
تغيير كيس الأتربة ١٠
تنظيف فلتر الإدخال ١٠
تنظيف فلتر الإخراج ١١

صيانة الأدوات والفلتر ١٢

معلومات السلامة

احتياطات هامة

- اقرأ كافة التعليمات بعناية. وقبل التشغيل، تأكد من أن فرق الجهد لمصدر التيار الكهربائي بنفس القيمة المشار إليها على لوحة التقييم أسفل المكنسة.
- تحذير: لا تستخدم المكنسة عندما تكون السجادة أو الأرضية مبللة.
  لا تستخدم المكنسة لشفط المياه.
- يجب الإشراف عن قرب عن استخدام الجهاز بواسطة الأطفال أو بالقرب منهم.
  لا تسمح باستخدام المكنسة كلعبة. لا تسمح بتشغيل المكنسة بدون رقابة في أي وقت. لا تستخدم المكنسة إلا في الغرض المقصود منها الموضح في هذه التعليمات.
- لا تستخدم المكنسة بدون كيس الأتربة. قم بتغيير كيس الأتربة قبل امتلائه للحفاظ على أفضل كفاءة.
- لا تستخدم المكنسة في التقاط أعواد الثقاب أو الرماد الحي أو أعقاب السجائر. احرص على إبعاد المكنسة عن الأفران أو مصادر التسخين الأخرى. يمكن أن تؤدي الحرارة إلى تشويه أو تغيير لون الأجزاء البلاستيكية للوحدة
- تجنب التقاط الأجسام الصلبة أو الحادة باستخدام المكنسة لأنها قد تؤدي إلى تلف أجزاء المكنسة. تجنب الوقوف على الخرطوم. تجنب وضع أوزان على الخرطوم. لا تقم بسد منفذ الشفط أو منفذ العادم.
- احرص على إيقاف تشغيل المكنسة من المفتاح الموجود على جسم المكنسة قبل فصل المكنسة عن المأخذ الكهربائي. قم بفصل القابس عن المأخذ الكهربائي قبل تغيير كيس الأتربة أو حاوية الأتربة. لتجنب التلف، برجاء إزالة القابس من خلال الإمساك بالقابس نفسه وليس من خلال سحب السلك.
- هذا الجهاز غير مخصص للاستخدام عن طريق أشخاص يعانون من نقص في القدرات الجسدية أو الحسية أو العقلية (بما في ذلك الأطفال)، أو من تنقصهم الخبرة والمعرفة، ما لم تتوافر لهم المراقبة أو تعليمات استعمال الجهاز عن طريق أحد الأشخاص يكون مسئولاً عن سلامتهم.
- يجب الإشراف على الأطفال الصغار للتأكد من أنهم لا يلعبون بالجهاز.
- يجب نزع القابس من المأخذ قبل تنظيف أو صيانة الجهاز.
- لا يوصى باستخدام سلك تطويل.
- إذا لم يتم تشغيل المكنسة بشكل صحيح، قم بإيقاف تشغيل الطاقة ثم استشر وكيل خدمة مخول.
- في حالة حدوث تلف في كابل التزويد بالطاقة، يجب أن يتم استبداله بواسطة المصنع، أو وكيل الخدمة أو شخص مؤهل لهذا العمل لتجنب المخاطر.
- تجنب حمل المكنسة من خلال الإمساك بالخرطوم.
  استخدم المقبض الموجود على وحدة المكنسة.
- قم بفصل التيار عن المكنسة في حالة عدم استخدامها. قم بإيقاف تشغيل الطاقة قبل نزع القابس.

معلومات السلامة

معلومات السلامة

• قبل تشغيل الجهاز، برجاء قراءة هذا الدليل بالكامل والاحتفاظ به كمرجع لك.
• نظرًا لأن تعليمات التشغيل التالية تغطي مجموعة متنوعة من الطرازات، فقد تكون خصائص المكنسة الخاصة بك مختلفة نوعًا ما عن تلك الموضحة في هذا الدليل.

رموز التنبيه/التحذير المستخدمة

⚠ تحذير	يشير إلى وجود خطر يسبب الوفاة أو إصابة خطيرة.
⚠ تنبيه	يشير إلى خطر يسبب إصابة شخصية أو تلف في الممتلكات.

الرموز الأخرى المستخدمة

	يمثل شيء يجب عدم القيام به.
	يمثل شيء يجب اتباعه.
	يشير إلى أنه يجب فصل سلك الطاقة عن المأخذ.
	يوصى بأن يتم التعامل مع هذا الرمز بواسطة فني الصيانة.

المكنسة
دليل المستخدم

ARABIC

* قبل استخدام هذه الوحدة برجاء قراءة التعليمات بعناية.
* للاستخدام الداخلي فقط.

تخيل الإمكانات

شكرًا على شراء منتج Samsung للحصول على.
خدمة كاملة. برجاء تسجيل المنتج لديك على الموقع
www.samsung.com/register

SAMSUNG

Code No. DJ68-00462B REV(0.0)